

# CYCLONE PRE-SEPARATOR INSTRUCTIONS

## 1. Before use:

- Make sure that the pre-separator is correctly installed in the vacuum cleaner.
- Check that the tank is empty before use.

## 2. Vacuuming with a pre-separator

- Please note that, according to the pre-separator principle, dust is primarily collected in the first container.
- Keep an eye on how full the tank is and empty it in good time to prevent the dust from reaching the vacuum cleaner itself.

## 3. Emptying process:

- Always empty the tank when it is no more than half full to maintain optimum separation performance.

## 4. Special warnings:

- Do not use the pre-separator to vacuum glowing, burning or hot materials mixed together (ash/normal cleaning dust).
- Vacuum hot ashes intermittently (about 1-2 seconds) and provide the vacuum cleaner with a suction hose for 5-10 seconds to provide cold replacement air from outside the ash chamber. Avoid melting the suction hoses.

## 5. After use:

- Empty the pre-separator after use.

These instructions will ensure the efficient operation of the pre-separator and increase the lifetime of the vacuum cleaner. Follow the instructions carefully.

NOTE! NOTE THE CORRECT ORDER OF THE HOSES GOING INTO THE PRE-SEPARATOR VACUUM.

NOTE! WHEN USING THE VACUUM, THE FIRE SAFETY REGULATIONS MUST BE OBSERVED.

